

 **CRESTO SAFETY**


RESQ Smartline X Ultra instruction for use - Bag



CRESTO SAFETY

These instructions are a guide to best practice when connecting/carrying the RESQ Smartline X Ultra bag for working at height.

NOTE: The bag and its connections are designed to fail if exposed to forces that might impede a fall when working at height in PFPE.

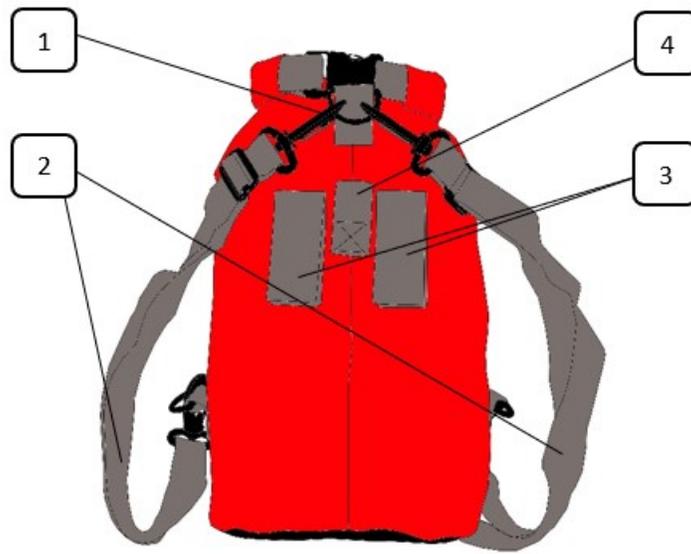

1. Attachment point D-ring - harness
2. Carrying-harness
3. Velcro attachment – harness webbing
4. Attachment point for tool lanyard



Smartline X Ultra Bag

Bag Smartline x Ultra 50-80m Art: SMX1002
Without carrying-harness

Bag Smartline X Ultra 100-150m Art: SMX1001
Bag Smartline X Ultra 160-200m Art: SMX1003



SMX1002



SMX1001 & SMX1003



Smartline X Ultra Bag - Small

Attach the Velcro straps (3) around a horizontal harness. Attach a tool lanyard that should support a minimum of 3 kg to the attachment point (4) between the Velcro straps.





Smartline X Ultra Bag – Medium & Large

Alternative 1:
Attach the Velcro straps (3) around a horizontal harness. Attach a tool lanyard that should support a minimum of 4 kg to the attachment point (4) between the Velcro straps.





Alternative 2:

Attach a carabiner to the attachment point (1). Attach a tool lanyard that should support a minimum of 4 kg to the attachment point (4) between the Velcro straps.





Alternative 3:

Carry a as a backpack using the carrying harness (2).

